

# Appendix A

## Tool and Setup Scripts

cadence
Downloads

[DOWNLOADS](#) | [LATEST RELEASES](#) | [FAQs](#) | [HELP](#) | [CONTACT US](#) | [LOGOUT](#)

### DOWNLOADS: Cadence Releases Available for Installation

To get information about, download, install, and configure Cadence releases:

- Check your preferences:** Click the [Edit](#) button on My Downloads Preferences to check or change your server, download method, and default OS.
- Get release information:** Click on a Release below to view Readme files, product listings, and available updates and hotfixes. You can also optionally download Release control files (for use with InstallScape).
- Install InstallScape:** Install InstallScape if it is not already installed in your environment. See [Getting InstallScape](#) for details.
- Download, install, and configure products:** Run InstallScape as a standalone utility to download, install, and configure products. See [Using InstallScape](#) for details.
- Sign up for email:** Subscribe to the Cadence [SourceLink](#) UPDATE to Receive Product

HPPARISC	IBMRISC	LINUX	SOLARIS	WINDOWS	SOL_x86_64	OTHER
<a href="#">ABVIPAH810</a>		<a href="#">ETS62</a>		<a href="#">IPCM62</a>		<a href="#">PAS30</a>
<a href="#">ABVIPAX110</a>		<a href="#">ETS71</a>		<a href="#">IPCM81</a>		<a href="#">PAS31</a>
<a href="#">ABVIPQCP10</a>		<a href="#">EVCAMBA22</a>		<a href="#">IPX62</a>		<a href="#">PVS70</a>
<a href="#">ABVIPQCP22</a>		<a href="#">EVCAXI12</a>		<a href="#">IPX81</a>		<a href="#">PVS80</a>
<a href="#">ADW157</a>		<a href="#">EVCETH22</a>		<a href="#">IUS58</a>		<a href="#">RC71</a>
<a href="#">ADW1601</a>		<a href="#">EVCPCI22</a>		<a href="#">IUS61</a>		<a href="#">RC72</a>
<a href="#">AES10</a>		<a href="#">EVCPCIE22</a>		<a href="#">IUS62</a>		<a href="#">RC81</a>
<a href="#">AMSD611</a>		<a href="#">EVCUSB22</a>		<a href="#">IUS81</a>		<a href="#">RCC51</a>
<a href="#">AMSKIT51</a>		<a href="#">EXT51</a>		<a href="#">IXE31</a>		<a href="#">RCC71</a>
<a href="#">AMSKIT61</a>		<a href="#">EXT62</a>		<a href="#">IXE51</a>		<a href="#">RCC72</a>
<a href="#">ANLS61</a>		<a href="#">EXT71</a>		<a href="#">IXE52</a>		<a href="#">RCC81</a>
<a href="#">ANLS62</a>		<a href="#">EXT81</a>		<a href="#">KCL42</a>		<a href="#">RCV71</a>
<a href="#">ANLS71</a>		<a href="#">FINALE20</a>		<a href="#">KCL43</a>		<a href="#">RCV72</a>
<a href="#">ASSURA317</a>		<a href="#">FINALE61</a>		<a href="#">KCL44</a>		<a href="#">RKC81</a>
<a href="#">ASSURA32</a>		<a href="#">FINALE611</a>		<a href="#">KITSOVCV72</a>		<a href="#">RET16</a>
<a href="#">CCD62</a>		<a href="#">FINALE62</a>		<a href="#">KITSOCV81</a>		<a href="#">RET17</a>
<a href="#">CCD71</a>		<a href="#">FINALE63</a>		<a href="#">KMC38</a>		<a href="#">RFDSGN30</a>
<a href="#">CCD72</a>		<a href="#">FINALE64</a>		<a href="#">KMC39</a>		<a href="#">RFKIT52</a>
<a href="#">CCD81</a>		<a href="#">FINALE71</a>		<a href="#">KQV431</a>		<a href="#">RFSIPKT61</a>
<a href="#">CLDS10</a>		<a href="#">FINALE72</a>		<a href="#">KQV44</a>		<a href="#">RFSIPKT71</a>
<a href="#">CONFRML62</a>		<a href="#">ICS141</a>		<a href="#">LEA81</a>		<a href="#">RFSIPKT72</a>
<a href="#">CONFRML71</a>		<a href="#">IC610</a>		<a href="#">LPAB1</a>		<a href="#">RTL510</a>
<a href="#">CONFRML72</a>		<a href="#">ICC11241</a>		<a href="#">LPKIT71</a>		<a href="#">SBLD10</a>
<a href="#">CONFRML81</a>		<a href="#">ICS612</a>		<a href="#">LPKIT81</a>		<a href="#">SBLD11</a>
<a href="#">CONFRMLS71</a>		<a href="#">IES20</a>		<a href="#">Lic+Config_Utils</a>		<a href="#">SBL10</a>
<a href="#">CPS34</a>		<a href="#">IES61</a>		<a href="#">MBV72</a>		<a href="#">SBOV40</a>
<a href="#">FANL51</a>		<a href="#">IES62</a>		<a href="#">MMSIM62</a>		<a href="#">SOC61</a>
<a href="#">EMGR20</a>		<a href="#">IES81</a>		<a href="#">MMSIM70</a>		<a href="#">SOC62</a>
<a href="#">EMGR202</a>		<a href="#">IFV61</a>		<a href="#">NEOCELL34</a>		<a href="#">SOC71</a>
<a href="#">EMGR62</a>		<a href="#">IFV62</a>		<a href="#">NEOCKT33</a>		<a href="#">SOCDI62</a>
<a href="#">EMGR81</a>		<a href="#">IFV81</a>		<a href="#">NEOCKT34</a>		<a href="#">SPB157</a>
<a href="#">ET62</a>		<a href="#">IPCM60</a>		<a href="#">OA22</a>		<a href="#">SPB1601</a>
<a href="#">ET72</a>		<a href="#">IPCM61</a>		<a href="#">PACIFIC61</a>		<a href="#">SPB162</a>

#### My Download Preferences

**Server Location:** North America - West

**Download Method:** InstallScape using HTTP

**Default OS:** LINUX

[Edit](#)

#### Site Maintenance

**No Site Maintenance Scheduled.**

#### About InstallScape

InstallScape lets you download and install selected Cadence products in a release in a single step. InstallScape replaces Softload starting 1Q06.

Click here for [detailed information](#) about how to download, install, and use InstallScape. The most recent version is **3.60p002**.

#### Announcement

**Effective 29 September 2008, All New Software on DVD**

Effective 29 September 2008 all physical media software releases will be available only on DVD. [More»](#)

**New Software Download Server for North America East**

New Software Download Server will be available on August 21st, 2006 for US East Region. [More»](#)

**Cadence Licensing Update**

Starting March, 2006 and going forward all new base releases will require compliance with Next Generation Licensing (version 10.x or greater license server the NGL license file format). [More»](#)

Figure A.1: Screen shot from the Cadence *sourceLink* software download page

cādence™
DOWNLOADS | LATEST RELEASES | FAQ

---

## DOWNLOADS: Release - IC5141

Click *View all products in a release* to display all products in this release.  
 Click the Readme files to display them.  
 Optionally click Download by InstallScope to download a control file for a given release. (See [Using InstallScope](#) for details.)

HPPARISC
IBMRISC
LINUX
SOLARIS

[View All Products in Release](#)

**LINUX RHEL 2.1**  
08 Jul 2004

Download by InstallScope »
 Readme Files: [README](#)

**Updates**

**LINUX RHEL 2.1**

29 Jun 2007 **IC5141USR5**, Version: 28 Jun 2007 IC 5.1.41 USR5  
Download by InstallScope »
 Readme Files: [README](#), [README\\_relnotes.pdf](#)

16 Sep 2006 **IC5141USR4**  
Download by InstallScope »
 Readme Files: [README](#), [README\\_relnotes.pdf](#)

09 Dec 2005 **IC5141USR3**  
Download by InstallScope »
 Readme Files: [README](#), [README\\_relnotes.pdf](#)

22 Jul 2005 **IC5141USR2**  
Download by InstallScope »
 Readme Files: [README](#)

25 Jan 2005 **IC5141USR1A**, Version: EM64T support  
Download by InstallScope »
 Readme Files: [README](#), [README\\_PRD](#)

10 Dec 2004 **IC5141USR1**  
Download by InstallScope »
 Readme Files: [README](#), [README\\_PRD](#)

**Hotfix**

**LINUX RHEL 2.1**

25 Oct 2008 **ISR200810241255**, Version: 5.10.41.500.5.127  
Download by InstallScope »
 Readme Files: [README](#), [README\\_CCR](#), [README\\_timecode](#), [README\\_relnotes.pdf](#)

(Copyright ©2008, 2010, Cadence Design Systems, Inc. All rights reserved worldwide. Reprinted with permission.)

**Figure A.2:** Screen shot from the Cadence *sourceLink* software download page, *IC5141* release

